
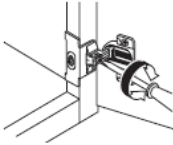
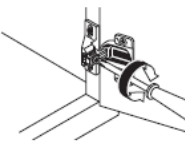

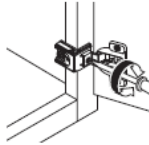
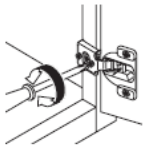
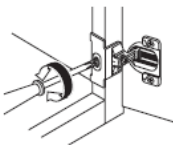
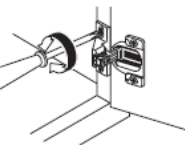
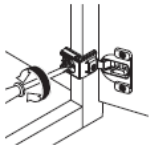
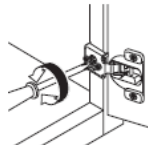


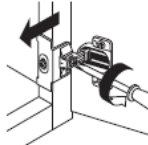
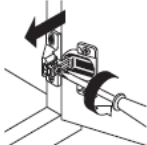
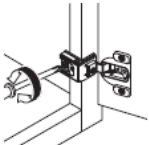
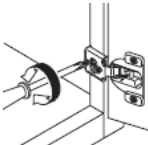

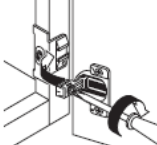
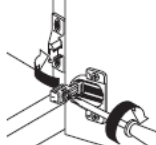
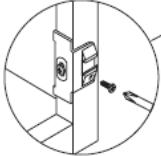


**Wolverine Brand Cabinetry**

**Blum – Compact Hinges**  
Full Overlay or Partial Overlay Face Frame Cabinet Construction

COMPACT 33 series		COMPACT 38C/39C & 38N series			
Side adjustment	Large overlay	Small overlay	Side adjustment	Large overlay	Small overlay
 <p>Loosen front screw, position door, tighten screw. Range = 1/8" (3mm)</p>			 <p>Turn front screw counter-clockwise to increase door overlay, clockwise to decrease. Range = 1/8" (3mm)</p>		
Height adjustment			Height adjustment		
 <p>Loosen screw(s) on the mounting plate. Adjust door to position and tighten screw(s). Range = 9/32" (7mm)</p>			 <p>Loosen center screw. Adjust door to position and tighten screw. Range = 1/4" (6mm)</p>		
Door removal			Door removal		
Loosen side adj. screw, Slide hinge off mounting plate towards center of cabinet.			 <p>Turn back screw counter-clockwise to increase door gap, clockwise to decrease. Range = -1/32" (1mm) + 3/32" (2mm)</p>		
Door installation					
To reinstall reverse procedure, tighten screws on all hinges.					
 <p>Note: Before finishing hinge installation, place set screw in hinge plate to prevent hinge plate movement. (1 3/8" or greater overlays only.)</p>					

Videos:

[https://d2.blum.com/BEC003/cobhadj\\_mo\\_rf\\_fi\\_bus\\_\\$sus\\_\\$amp4720p\\_\\$v1.mp4](https://d2.blum.com/BEC003/cobhadj_mo_rf_fi_bus_$sus_$amp4720p_$v1.mp4)

